
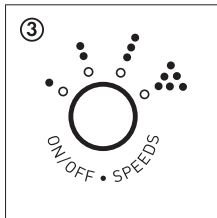


## pounce User Guide

### Set Up

1. Insert 3 AA batteries into the battery compartment.
2. Replace batter door and ensure it is locked.
3. Press on/off • speeds button to turn pounce on.

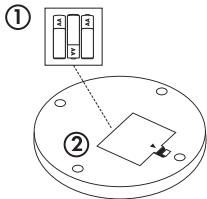

### Operating Instructions

#### Variable Speeds

- Press on/off • speeds button to turn on.
- Pounce will run in slow speed.
- Press on/off • speeds button again to change the speed to medium, fast, or variable.
- The light for the selected speed (slow •, Medium ••, fast •••, variable ••••) will glow solid red.

#### Timer

- Pounce will automatically turn off after 10 minutes.
- Press on/off • speeds button to turn off before 10 minutes has elapsed.

#### Have questions? Call us!

- If you have questions about pounce or any of our products, please call us toll free at 800-732-2677 to speak with one of our knowledgeable animal-loving staff.

### To Ensure Proper Function

Do not mix old and new batteries.

Only use batteries of the same or equivalent type as recommended.

Do not mix standard, alkaline, or rechargeable batteries.

Exhausted batteries should be removed immediately.

Do not dispose of batteries with household waste.

Inspect this product periodically for damage and stop use immediately if it appears worn or broken.

### ⚠WARNING

Pets should be supervised while playing with this product.

This product is intended for pets, not for children. Do not allow small children to use this product to play with your pet without adult supervision.

#### Advice for use

Apart from playing with Pounce, pet owners should provide their pets with a variety of play activities, opportunities for stimulation, and an appropriate amount of daily exercise as determined by you and your veterinarian.