

## RoloRat User Guide


Do not use the RoloRat until you have read entire user guide.

### Toy Assembly

No assembly is required. Simply install batteries, press power button and place RoloRat on the ground to use.


### Battery Installation and Use

1. Locate battery door on bottom of the toy as shown in diagram 1.

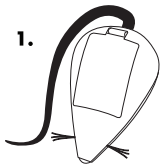


2. Open battery door.

3. Position 3 AAA batteries as shown in diagram 2.

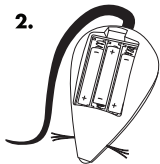

4. Close battery door.

5. Press power button on nose to turn on as shown in diagram 3.

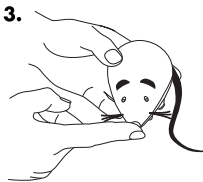

## Operating Instructions

### One-Time-Play Mode

- Press and release power button located on nose of the toy to turn on power.
- The toy will activate and make clicking noises.
- The toy will automatically turn off after 10 minutes.
- If you wish to end play session before the toy automatically turns off, press the nose button then release.

### Play While You Are Away Mode

Observe your cat playing with the toy before you enable the Play While You Are Away Mode. Make sure your cat can safely play with the toy in this mode, and that the toy is working properly before leaving your cat alone.

- To activate multiple play sessions throughout the day: When unit is off, press and hold the button for 3 seconds, until the toy beeps 3 times. The audible beeps indicate the toy will cycle through 3 play sessions.
- The next play session will begin 2 hours after the first play session. The final play session will begin two hours after the second play session has finished.
- Each play session will last 10 minutes.
- If you wish to power off, press the power button for 3 seconds, then release.
- Each time Play While You Are Away Mode is activated, and prior to leaving your cat unsupervised with the toy, ensure that the toy is in a safe location for your cat to play.
- Play While You Are Away Mode should be used at the owner's discretion.

### To Ensure Proper Function

- Do not mix old and new batteries.
- Do not mix standard, alkaline, or rechargeable batteries.
- Exhausted batteries should be removed immediately.
- Do not dispose of batteries with household waste.

### Advice for Use

Before using Play While You Are Away Mode, monitor your pet's play. Only use Play While You Are Away Mode if your pet uses the toy as intended.

Apart from playing with this product, it is recommended that pet parents interact with their pets and provide a variety of play activities, opportunities for stimulation, and an appropriate amount of daily exercise as determined by their veterinarian.

### **⚠ DANGER**

RoloRat is not a child's toy. Do not allow unsupervised use while in the presence of children.

### **⚠ WARNING**

- This product should only be used in accordance with the instructions in this User Guide.
- This product is intended for cats, not for children or dogs. Adult supervision is required around children and pets.
- Do not use RoloRat on an elevated surface such as a table or counter. Use on the floor only.